


## tools needed

- power drill
- phillips-head screwdriver
- 3/16" drill bit
- hammer/rubber mallet
- tape measure


begin by removing your old toilet paper holder the mounting plate hole spacing should match the previous hole spacing otherwise you will have to drill new holes according to the next steps

find the aluminum mounting plate included with the roto

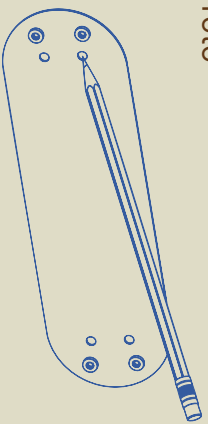


measure from the floor 18-24 inches to the bottom of the mounting plate depending on your height preference mark the mounting holes as shown in the figure above


drill holes at marked locations with 3/16" drill bit and install drywall inserts included with kit, anchors may need to be tapped in with a hammer or mallet

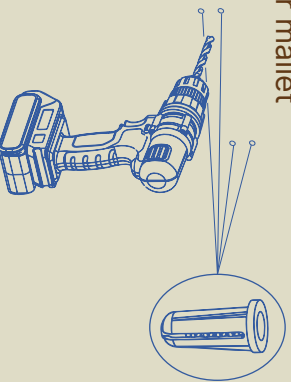


align mounting plate to previously prepared holes and fasten with the screws as shown

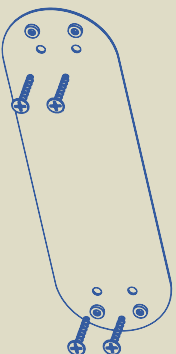


get the roto from the box and unscrew the caps as shown in the figure below

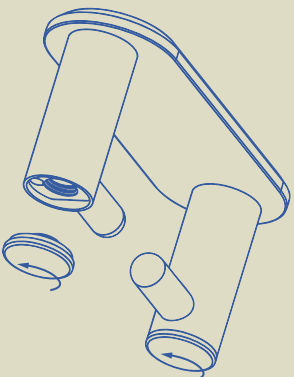

find the arrow on the back of the base and make sure this is pointed up when installing the roto

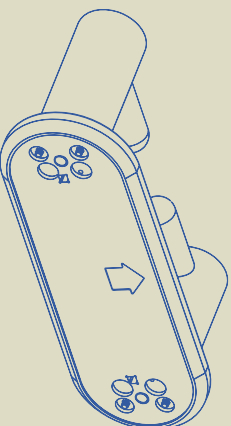


align the roto main body with the mounting plate and insert screwdriver through the holes in the arms as shown

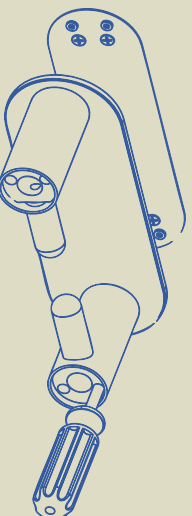


there are 4 screws in the body of the roto that need to be tightened

tighten each screw a small amount before moving to the next in a clockwise fashion

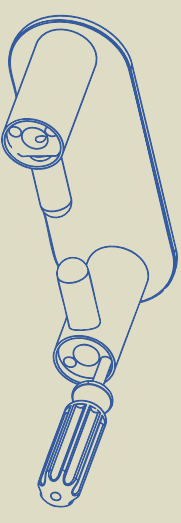


tighten each screw until they are tight and the base is flush to the wall

screw the caps back on until they are flush as shown

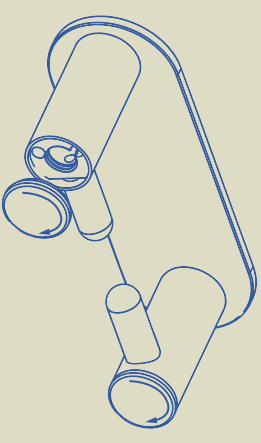

congratulations! you now have a fully functioning roto toilet paper holder. you can insert your toilet paper roll from the bottom as shown

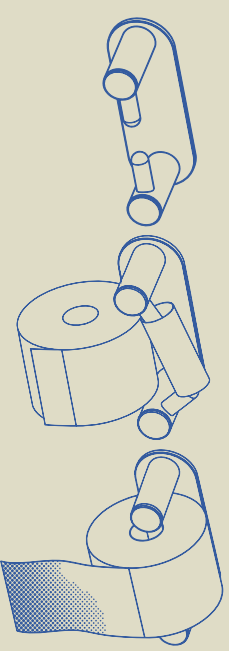

we really appreciate your purchase, if you have any questions regarding your roto please contact [support@figurastudio.com](mailto:support@figurastudio.com)

# ROTOR

toilet paper  
holder

install guide

